


STAGER MASTER CHART

FILL IN PROPER DESIGNATIONS TO DETERMINE PRODUCT NUMBER: **R**

USAGE 0 Stager not used in controller (Wire harness included) C Stager is used in controller (Wire harness not included) [Not for individual Sale]	
STAGER Rotary Pilot Stager Series to be Provided 48 6 Port (Brass) 51 8 Port (Brass) 58 16 Port (PVC)	
PROGRAM Stager Program to be Provided *00 - 99 STANDARD **SS SPECIAL Program per Drawing Indicated TA Twin Alternating Softener (Model 48, and 58 Only) ^TB Twin Alternating Softener (w/ <u>Timed Brine</u> Pos. & switch output) ^TR Twin Alternating Softener (w/ <u>Timed Refill</u> Pos. & switch output) * Two character designation from standard stager drawing. ** Special Drawing number placed in last 5 digits of product number. (Special Drawing number also used for Aux. Sw. notched in more than 1 position) ^ For model 58 stagers ONLY	
ENCLOSURE <u>N.E.M.A. Rating of Panel & Enclosure to be Provided</u> 7 NEMA 4 Mounting Plate w/Gasket on Stagers F NEMA 4X Fiberglass Panel & Enclosure	
ELECTRICAL <u>Power Required to Operate Device</u> 1 115 Volts / 60 Hertz for 48 & 51 Stagers 115 Volts 50 or 60 Hertz for 58B Stagers 2 220 Volts / 50 or 60 Hertz for ALL STAGERS 5 24 Volts / 50 or 60 Hertz (for 48 & 51 Stagers Only) 9 12 Volts / 50 or 60 Hertz for ALL STAGERS N 24 Volts / 50 or 60 Hertz (for 48 & 51 Stagers Only) NXT Cam & Wire Harness	
1st AUX. SWITCH <u>First Extra Switch to be provided on Rotary Pilot Stager</u> (Unless Special Drawing Number is Assigned) 0 NONE (Not valid for use with Pentair controllers) ^A to R CAM POSITION Switch is to be active (I & O not used) S SERVICE Return (Homing) (For Pentair Controllers, MUST be "S") W Status Lights Cam (48, & 58 Stagers w/TA Program only) Z BLANK CAM (no notches) * Use a Letter to indicate Cam position Not a Number. ^ Use SPECIAL DRAWING number if active in more than 1 position.	
2nd AUX. SWITCH <u>Second Extra Switch to be provided on Rotary Pilot Stager</u> (Unless Special Drawing Number is Assigned) 0 NONE ^A to R CAM POSITION Switch is to be active (I & O not used) S SERVICE Return (Homing) (Not for 48-TA) T TIMED SWITCH OUTPUT (58-TB, signal in Pos. 2 & 7) TIMED SWITCH OUTPUT (58-TR, signal in Pos. 4 & 9) Z BLANK CAM (no notches) * Use a Letter to indicate Cam position Not a Number. ^ Use SPECIAL DRAWING number if active in more than 1 position.	
PRESSURE <u>Program of Stager</u> , (Unless Special Drawing Number is Assigned) 0 STANDARD (Vent to open) 1 INVERTED (Pressure to open)	
0 (unless Special Drawing number is assigned)	
REVISION <u>Stager Revision Level</u> (Unless Special Drawing Number is Assigned) B 48 and 51 Series Rotary Pilot Stagers C 58 Series Rotary Pilot Stagers	

Rev.	DESCRIPTION	BY	DATE	ECN NO.
G	Added NXT Motor & Cam Option	TLE	25-Nov-14	103975
H	BRANDING UPDATE	JJJ	2-Jan-23	2177

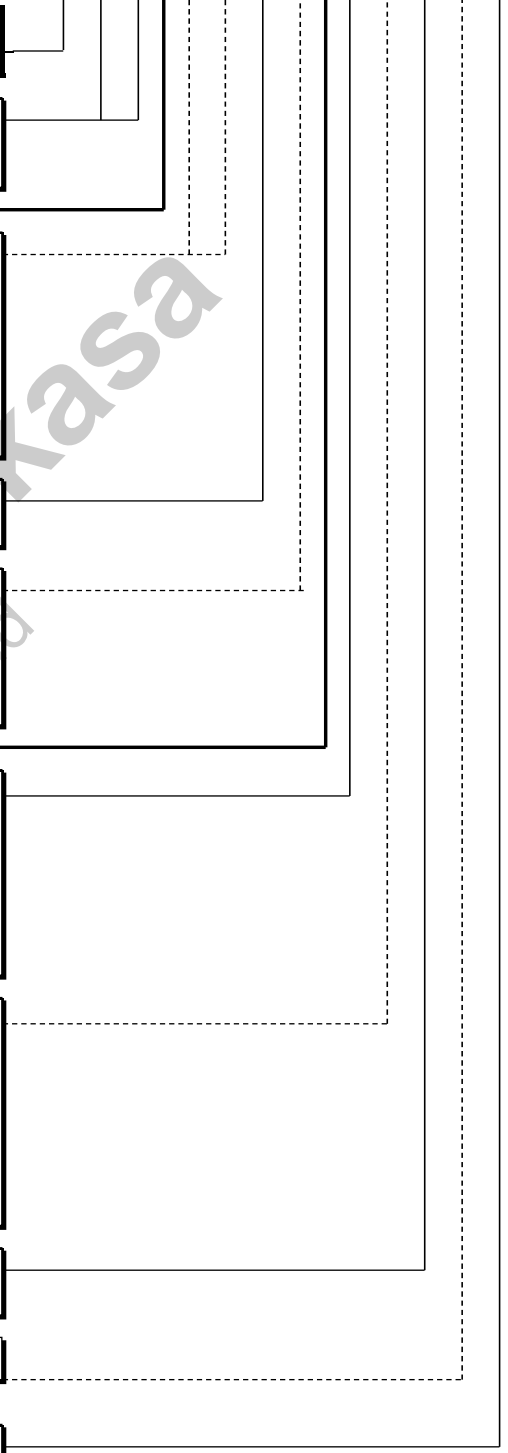