PRODUCT DATA SHEET

Purolite[™] A860S

Polyacrylic Macroporous, Chloride form, Sugar Grade

PRINCIPAL APPLICATIONS

- Decolorization Sugar Solutions
- Organic Scavenger

ADVANTAGES

- Highly reversible adsorption
- Excellent resistance to organic fouling
- Efficient regeneration

REGULATORY APPROVALS

- Kosher Certified
- Certified by the WQA to NSF/ANSI-61 Standard
- Water Regulations Advisory Scheme Approved

TYPICAL PACKAGING

- 1 ft³ Sack
- 25 L Sack
- 5 ft³ Drum (Fiber)
- 1 m³ Supersack
- 42 ft³ Supersack

TYPICAL PHYSICAL & CHEMICAL CHARACTERISTICS:

Polymer Structure	Macroporous polyacrylic crosslinked with divinylbenzene
Appearance	Spherical Beads
Functional Group	Quaternary Ammonium
Ionic Form	CI ⁻ form
Total Capacity (min.)	0.8 eq/L (17.5 Kgr/ft³) (Cl ⁻ form)
Moisture Retention	66 - 72 % (Cl⁻ form)
Particle Size Range	425 - 1200 μm
< 425 µm (max.)	2 %
Uniformity Coefficient (max.)	1.6
Volume Change $CI^- \rightarrow OH^-$ (max.)	30 %
Specific Gravity	1.08
Shipping Weight (approx.)	680 - 730 g/L (42.5 - 45.6 lb/ft³)
Temperature Limit	80 °C (176.0 °F) (Cl⁻ form)




Hydraulic Characteristics

PRESSURE DROP

The pressure drop across a bed of ion exchange resin depends on the particle size distribution, bed depth, and voids volume of the exchange material, as well as on the flow rate and viscosity of the influent solution. Factors affecting any of these parameters such as the presence of particulate matter filtered out by the bed, abnormal compressibility of the resin, or the incomplete classification of the bed—will have an adverse effect, and result in an increased head loss. Depending on the quality of the influent water, the application and the design of the plant, service flow rates may vary from 10 to 40 BV/h.


BACKWASH

During up-flow backwash, the resin bed should be expanded in volume between 50 and 70% for at least 10 to 15 minutes. This operation will free particulate matter, clear the bed of bubbles and voids, and reclassify the resin particles ensuring minimum resistance to flow. When first putting into service, approximately 30 minutes of expansion is usually sufficient to properly classify the bed. It is important to note that bed expansion increases with flow rate and decreases with influent fluid temperature. Caution must be taken to avoid loss of resin through the top of the vessel by over expansion of the bed.

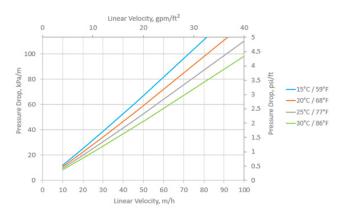

PRESSURE DROP ACROSS RESIN BED

BACKWASH EXPANSION OF RESIN BED

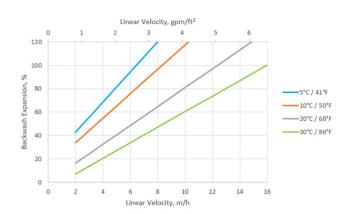





Ecolab is a global developer, manufacturer, and supplier of Purolite[™] Resins including ion exchange, catalyst adsorbent and advanced polymers that make the world cleaner and healthier.

Purolite Resins Headquarters Ecolab Headquarters King of Prussia, PA St. Paul, MN Llantrisant, Wales Pharma Resin Manufacturing Philadelphia, PA ndustrial Resin Manufacturing Huzhou, China Victoria, Romania Industrial + Pharma Resin ndustrial + Pharma Re Manufacturing King of Prussia, PA Manufacturing Pharma Resin Manufacturing Landenberg, PA harma Resin Manufacturing

We're ready to solve your process challenges.

For further information on products and services, visit <u>www.puroliteresins.com</u> or complete a Contact Us form via <u>PuroliteResins.com/contact-us</u> or use the QR code.

The statements, technical information and recommendations contained herein are believed to be accurate as of the date hereof. Since the conditions and methods of use of the product and of the information referred to herein are beyond our control, Purolite expressly disclaims any and all liability as to any results obtained or arising from any use of the product or reliance on such information; NO WARRANTY OF FITNESS FOR ANY PARTICULAR PURPOSE, WARRANTY OF MERCHANTABILITY OR ANY OTHER WARRANTY, EXPRESSED OR IMPLIED, IS MADE CONCERNING THE GOODS DESCRIBED OR THE INFORMATION PROVIDED HEREIN. The information provided herein relates only to the specific product designated and may not be applicable when such product is used in combination with other materials or in any process. Nothing contained herein constitutes a license to practice under any patent and it should not be construed as an inducement to infringe any patent and the user is advised to take appropriate steps to be sure that any proposed use of the product will not result in patent infringement.



2025 Purolite All rights reserved. www.puroliteresins.com

Contact Us Form:

